

## VINTAGE RANGE - MATT BLACK

---

### Rocker Light Switches



XBK.100.BK  
1 Gang Rocker Switch (10  
Amp)



XBK.110.BK  
2 Gang Rocker Switch (10  
Amp)



XBK.120.BK  
3 Gang Rocker Switch (10  
Amp)



XBK.130.BK  
4 Gang Rocker Switch (10 Amp)



XBK.101.BK  
1 Gang Intermediate Rocker Switch (10  
Amp)

---

### Toggle Light Switches



XBK.2400.BK  
1 Gang Toggle Switch



XBK.2410.BK  
2 Gang Toggle Switch



XBK.2420.BK  
3 Gang Toggle Switch



XBK.2430.BK  
4 Gang Toggle Switch



XBK.2401.BK  
1 Gang Intermediate Toggle  
Switch

---

### Dimmer Switches



XBK.260.250  
1 Gang Dimmer (250  
watts)



XBK.260.400  
1 Gang Dimmer (400  
watts)



XBK.270.250  
2 Gang Dimmer (250  
watts)



XBK.270.400  
2 Gang Dimmer (400  
watts)



XBK.280.250  
3 Gang Dimmer (250 watts)



XBK.280.400  
3 Gang Dimmer (400 watts)



XBK.290.250  
4 Gang Dimmer (250 watts)



XBK.290.400  
4 Gang Dimmer (400 watts)

---


## LED Dimmer Switches



XBK.260.TED  
1 Gang LED Dimmer



 XBK.270.TED  
2 Gang LED Dimmer

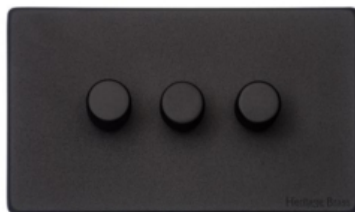

XBK.280.TED  
3 Gang LED Dimmer

---

## Plug Sockets



XBK.140.BK  
Single Socket (13 Amp)



XBK.150.BK  
Double Socket (13 Amp)

---

## USB Sockets



XBK.740.BK-USB  
Single USB Socket (13  
Amp)



XBK.750.BK-USB  
Double USB Socket (13 Amp)

---

## Unswitched Socket



XBK.182.BK  
5 Amp 3 Round Pin  
Socket

---

## Shaver Sockets



XBK.185.BK  
Shaver Socket Output Voltage  
110/240V

---

## Fused Spur Units



XBK.134.BK  
Unswitched Spur (13  
Amp)



XBK.135.BK  
Switched Spur (13 Amp)



XBK.136.BK  
Switched Spur with Neon (13  
Amp)



XBK.138.BK  
Switched Spur with Neon + Cord (13  
Amp)

---

## Double Pole Switches



XBK.105.BK  
20A Double Pole Switch



XBK.106.BK  
20A Double Pole Switch with  
Neon

---

## Cooker Switches



XBK.163.BK  
45A DP Cooker Switch with Neon (single  
plate)



XBK.161.BK  
45A DP Cooker Switch with Neon (tall  
plate)



XBK.162.BK  
45A Cooker Unit + 13A Socket

---

## Fan Isolator Switches



XBK.1990.BK  
6A Triple Pole Fan Isolator  
Switch

---

## TV and Satellite Sockets



XBK.121.BK  
1 Gang Non-Isolated TV Coaxial  
Socket



XBK.123.BK  
1 Gang Isolated TV Coaxial  
Socket




XBK.122.BK  
2 Gang TV Coaxial  
Socket



XBK.125.BK  
1 Gang Satellite Socket



 XBK.126.BK  
TV/Satellite Socket

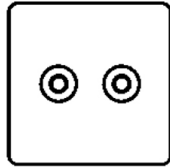

XBK.224.BK-DIP  
TV/FM Diplexed Socket

---

## Telephone and Data Sockets



XBK.166.BK-S  
1 Gang Secondary Line  
Socket



XBK.167.BK-M  
1 Gang Master Line  
Socket



XBK.156.BK-S  
2 Gang Secondary Line  
Socket



XBK.157.BK-M  
2 Gang Master Line  
Socket



XBK.168.BK-RJ45  
1 Gang RJ45



XBK.169.BK-RJ11  
1 Gang RJ11



XBK.158.BK-RJ45  
2 Gang RJ45

---

## Euro Module Plates



PL.XBK.2691.G  
1 Module Euro Plate



 
PL.XBK.2692.G  
2 Module Euro Plate



PL.XBK.2694.G  
4 Module Euro Plate

---

## Flex Outlets

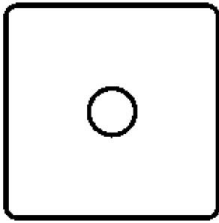

XBK.109.BK  
1 Gang Flex Outlet (20  
Amp)

---

## Blank Plates



XBK.131  
Single Blank Plate



XBK.132  
Double Blank Plate